


 



 
 
 
 
 

 


 



 



 
 
 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Play		Play
	Pause		Pause
	Stop		Stop
	USB		Media
	Rec		Rec
	Info		Info
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>		>>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
			SAT
			Menu
			Exit
			Up
			Down
			Right
			Left
			Ok
			Subtitle
			Text
			Recall
			Audio
			Page+
			Page-
			1
			2
			3
			Smart
			Menu
			Exit
			Up
			Down
			Right
			Left
			Ok
			Subt
			Text
			Back
			Dual
			Ch +
			Ch -
			1
			2
			3





	Original	Replacement	Original	Replacement
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	EPG	GUIDE		
	Tv/Radio	TV/R		

