



 
 

 

 


 
 
 
 
 

 
 
 

 
 
 
 
 

 





 
 




 
 
 



 

 






 
 



 

 
 
 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	Sports		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.LIST		List
	Menu		Menu
	Smart HUB		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Original	Replacement	Original	Replacement
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 E-Manual	 Shift + D. Menu		
 Extra	 D. Menu		
 Search	 TV/R		
 PIC.Size	 Format		
 Picture	 Shift + Format		
 AD/Subt	 Subt		
 <</ <<	 <<		
 Pause	 Pause		
 >>/>>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

