








 















 

 
 


 








Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<< / Preset-
 Control	 Setup / OPT /	 Stop	 Stop / Hold
 [i+]	 Info / Angle	 >>I	 >>I / Preset+
 P.Info	 Smart / List	 1	 1
 ATV	 Shift + Smart / List	 2	 2
 DTV	 Shift + Display / Media	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Ext. Media	 Shift + Power	 6	 6
 ←	 Shift + Left	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 →	 Shift + Right	 9	 9
 Rec	 Rec / Rec Mode	 Recall	 Fav / Marker / PC
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Source	 AV / Input / RDS
 >>	 >> / Tune+	 I/II/I+II/▼/O	 Audio / Lang I/II
 Rec Stop	 Shift + Stop / Hold	 [<>]	 Picture / Format

Hold



