
 
 
 







 
 
 
 

 
 


 

 
 
 


 
 
 


 








Original	Replacement
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Original	Replacement
Down	Down
Return	Back
System Menu	Menu
[+] Display	Info
I<< / Preset-	I<<
Replay	Shift + Left
Advance	Shift + Right
>>I / Preset+	>>I
<< / <I / Tuning-	<<
Play	Play
>> / I> / Tuning+	>>
Pause	Pause
Stop	Stop
TV	TV/R
Muting	Mute
Volume+	Vol +
Volume-	Vol -

Original	Replacement
Sound Mode+	Ch +
Sound Mode-	Ch -





	Original	Replacement		Original	Replacement
	Power		Power		Source
	[i+]		Info		Tools / Options
	Analog		Media		Home / Menu
	Digital		Smart		Muting
	1		1		Volume+
	2		2		Volume-
	3		3		Prog+
	4		4		Prog-
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Text		Text		
	-/--		Shift + Guide		
	Guide		Guide		

	AV	AV
	Options	Options
	Menu	Menu
	Mute	Mute
	Vol +	Vol +
	Vol -	Vol -
	Ch +	Ch +
	Ch -	Ch -

