

 






 

 
 
 
 
 

 




 
 





 







| Original | Replacement | Original | Replacement |
|---|--|--|---|
|  Power |  Power |  Night |  Media |
|  Input |  AV |  Voice |  Smart |
|  Play Mode |  Shift + Play |  Movie/Music |  Subt |
|  Enter |  Ok |  Clear Audio+ |  Exit |
|  Back |  Back | | |
|  Audio |  Dual | | |
|  ↑ |  Up | | |
|  ↓ |  Down | | |
|  Vol+ |  Vol + | | |
|  Vol- |  Vol - | | |
|  Mute |  Mute | | |
|  SW Vol+ |  Ch + | | |
|  SW Vol- |  Ch - | | |
|  Play |  Play | | |
|  Pause |  Pause | | |
|  >> |  >> | | |
|  << |  << | | |

