 



 

































 



 

 





 

 







 











Original		Replacement		Original		Replacement	
	Standby		Power		Down / CH -		Down
	Mute		Mute / Dimmer		Timeshift		Sleep / Timer
	PG +		>>I / Preset+		1		1
	PG -		I<< / Preset-		2		2
	DTV / VCR		Smart / List		3		3
	Vol +		Vol+		EPG		Guide / EPG / -/--
	Info		Info / Angle		4		4
	Vol -		Vol-		5		5
	Menu		Menu / Home		6		6
	Up / CH +		CH+ / Page+		Recall		Back / Return
	Up / CH +		Up		7		7
	Exit		Exit / Cancel / Clear		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		Audio		Audio / Lang I/II
	Record		Rec / Rec Mode		TV / Radio		TV/Radio /
	Down / CH -		CH- / Page-		FAV		Fav / Marker / PC





Original	Replacement
File	Display / Media
TTX	Text / Goto
Subtitle	Subtitle / EQ
<<	<< / Tune-
>>	>> / Tune+
Red / Stop	Red / Netflix / Search
Red / Stop	Stop / Hold
Green / Step	Green / APP / Repeat
Green / Step	Shift + Pause / Step / Step /
Yellow / Pause	Yellow / YouTube / Repeat
Yellow / Pause	Pause / Step / Freeze
Blue / Play	Blue / Prime Video / Random
Blue / Play	Play / Slow

Original	Replacement

