



| Original | | Replacement | | Original | | Replacement | |
|----------|--------------|-------------|-------------------|----------|---------|-------------|-----------------------|
| | Power | | Power | | Left | | Left |
| | Mute | | Mute / Dimmer | | Enter | | OK |
| | Play/Pause | | Play / Slow | | Right | | Right |
| | Stop | | Stop / Hold | | Exit | | Exit / Cancel / Clear |
| | Rec | | Rec / Rec Mode | | Down | | Down |
| | <</REW | | << / Tune- | | Recall | | Back / Return |
| | >>/FF | | >> / Tune+ | | Vol+ | | Vol+ |
| | I<</Prev | | I<< / Preset- | | Page Up | | CH+ / Page+ |
| | >>I/Next | | >>I / Preset+ | | Vol- | | Vol- |
| | Audio | | Audio / Lang I/II | | Page Dn | | CH- / Page- |
| | Subtitle | | Subtitle / EQ | | 1 | | 1 |
| | Tv/Radio/MMB | | TV/Radio / | | 2 | | 2 |
| | Setup | | Setup / OPT / | | 3 | | 3 |
| | TTX | | Text / Goto | | 4 | | 4 |
| | Menu | | Menu / Home | | 5 | | 5 |
| | Up | | Up | | 6 | | 6 |
| | Info | | Info / Angle | | 7 | | 7 |



