



Original	Replacement	Original	Replacement
Power	Power	Dn/>>>I	Ch -
Tv-Out	AV	Menu	Menu
1	1	>>	>>
2	2	<<	<<
3	3	Player	Yellow
4	4	Stop	Stop
5	5	Enter	Ok
6	6	Right	Right
7	7	Left	Left
8	8	Up	Up
9	9	Down	Down
0	0	Mute	Mute
Subtitle	Subt	Zoom	Shift + Eject
Audio	Dual	Repeat	Text
Vol+	Vol +	Setup	Options
Vol-	Vol -	Display	Shift + Info
Up/ <<	Ch +	Rotate	Back





Original	Replacement	Original	Replacement
 S-TIME	 Sleep		
 S-Mode	 Info		
 Movie	 Guide		
 Music	 Pre Ch		
 Photo	 Shift + Options		
 File	 Eject		
 TV-Out	 TV/R		

