 

 


 



 

 

 









 








 





Originalfernbedienung Ersatzfernbedienung




 




	Power		Power
	Source		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Vol+		VOL +
	Vol-		VOL -
	Mute		MUTE

Originalfernbedienung Ersatzfernbedienung

	P+		CH +
	P-		CH -
	CH List		TV/R
	Content		Shift + VOD
	Menu		MENU
	Guide		-/-- / EPG
	Tools		OPT+
	Info		INFO
	Return		BACK
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Enter		OK
	Red		Red (A)
	Green		Green (B)





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	Media. P		MEDIA				
	Internet/@TV		VOD				
	Dual I-II		Audio				
	AD		WIDE				
	P.Size		V-FOR				
	Subt.		Subt.				
	<<		Rewind				
	Pause		Pause				
	>>		Fast Forward				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

