



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	[]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1





Originalfernbedienung Ersatzfernbedienung








2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</Hold		<< / Tune-
>>/Index		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Nicam/A2		Audio / Lang I/II
Subtitle		Subtitle / EQ
Subpage		Eject / Surround
Size		Zoom / Size
Sleep		Sleep / Timer
DTV/Radio		TV/Radio /
Reveal		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

TXT/MIX		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
Enter		OK
Right		Right
Cancel		Exit / Cancel / Clear
Down		Down
Back		Back / Return
Vol+		Vol+
List		Smart / List
CH+		CH+ / Page+
Vol-		Vol-
Mode		Display / Media
CH-		CH- / Page-
1		1





Originalfernbedienung Ersatzfernbedienung

2	DVD 2	2
3	CD - STB 3	3
4	VIDEO 4	4
5	TAPE 5	5
6	TUNER 6	6
7	AUX - HDD 7	7
8	USB 8	8
9	BLUETOOTH 9	9
EPG	GUIDE EPG	Guide / EPG / -/--
0	HDMI - SAT 0	0
FAV	PC FAV MARKER	Fav / Marker / PC
Red	NETFLIX SEARCH	Red / Netflix / Search
Green	APP REPEAT	Green / APP / Repeat
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Prime Video RANDOM	Blue / Prime Video / Random
<</Hold	SHIFT + HOLD	Shift + Stop /
FAV-	SHIFT + [Left Arrow]	Shift + Left

Originalfernbedienung Ersatzfernbedienung

FAV+	SHIFT + [Right Arrow]	Shift + Right
-/--	SHIFT + [GUIDE EPG]	Shift + Guide / EPG / -/--
















Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</[Timer]		<< / Tune-
>>/[≡?]		>> / Tune+
I<</[≡⇅]		I<< / Preset-
>>I/[≡...]		>>I / Preset+
Audio		Audio / Lang I/II
Subtitle		Subtitle / EQ
I<</[≡⇅]		Zoom / Size
<</[Timer]		Sleep / Timer
Text		Text / Goto
Source/Av		AV / Input / RDS
[II]		Menu / Home













 

Originalfernbedienung Ersatzfernbedienung

Up		Up
Info		Info / Angle
Left		Left
Ok		OK
Right		Right
Exit		Exit / Cancel / Clear
Down		Down
Recall		Back / Return
Vol+		Vol+
[≡i]		Smart / List
Ch+		CH+ / Page+
Vol-		Vol-
Ch-		CH- / Page-
1		1
2		2
3		3
4		4





Originalfernbedienung Ersatzfernbedienung

5		5
6		6
7		7
8		8
9		9
Epg		Guide / EPG / -/--
0		0
Fav		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Freeze	 + 	Shift + Pause / Step /

Originalfernbedienung Ersatzfernbedienung

