





 


























 













 

 
 

 


 













### Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

### Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





**Originalfernbedienung   Ersatzfernbedienung**

**Power** **DIMMER MUTE** **SHIFT**

**TV** **DVD** **SAT** **AUX**

SLOW STEP-FREEZE HOLD REC MODE

▶ || ◻ ●

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀ ▶

TITLE LANG UI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/ RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

◀ OK ▶

▲ ▼

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ -

VOL CH PAGE

TV DVD CD- STB

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX- HDD USB BLUETOOTH

7 8 9

↔ HDMI- SAT PC

GUIDE FAV

EPG MARKER

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

**Mandis**  
shop

www.mandis.tv