 





 











 

 






 







 

 

 

 

 

 

 

 

 

 

 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play/Pause/Hold		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Size		Stop / Hold
	Rec Menu		Rec / Rec Mode
	<<		<< / Tune-
	>> / Cancel		>> / Tune+
	I<< / Index		I<< / Preset-
	>>I/Reveal		>>I / Preset+
	Nicam		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Aspect		Picture / Format
	Sleep		Sleep / Timer
	Tv		TV/Radio /
	Subpage		D.Menu / Top
	PC Auto		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	??		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-



