




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Subt.		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	PRE-CH		Back / Return
	TTX/MIX		Text / Goto
	HDMI		Shift + 0

Originalfernbedienung Ersatzfernbedienung

	DTV		Shift + 1
	DTV		TV/Radio /
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	CH.List		Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Media.P		Display / Media
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right



