 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Netflix		Shift + Red / Netflix /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	EXIT		Exit / Cancel / Clear
	World		Smart / List
	Camera/Music/Ph		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	Games		AV / Input / RDS





**Originalfernbedienung**

**Ersatzfernbedienung**

	[≡]/Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Lang		Audio / Lang I/II
	[≡]..		Subtitle / EQ
	[-O-]		Zoom / Size
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

**Originalfernbedienung**

**Ersatzfernbedienung**