



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	*		D.Menu / Top
	Cable		AV / Input / RDS
	1		1
	Live Zoom		Zoom / Size
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	Search		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	0/Quick Access		0
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	P-		CH- / Page-
	Home		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Up		Up
	Netflix		Shift + Red / Netflix /
	Down		Down
	Amazon		Shift + Blue / Prime
	Right		Right




Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
T.Opt/Magic Link	Setup / OPT /
Left	Left
OK	OK
AD	Audio / Lang I/II
Rec	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Stop/Line Tv	Stop / Hold
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

