

 


 

 
 

 
 
 

 

 
 
 
 
 
 
 
 
 
 
 

 

 



 
 
 

 

 
 
 
 
 
 
 

 

 

 

 

 

 

 
 

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	>>		>>
	Left		Left
	<<		<<
	Back		Back
	Options		Options
	Disc		Menu
	Open/Close		Eject
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	>		>>

Originalfernbedienung Ersatzfernbedienung

	Play/Pause		Play
	<		<<
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sound		Dual
	Surr		Subt
	Source/Audio		AV
	Radio		TV/R





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
USB	USB	PICTURE FORMAT	Format
AUDIO SYNC	Sync/Audio	ECO 3D	3D

