



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	X/Shuffle		AV / Input / RDS
	0		0
	Repeat		Shift + Green / APP / REPEAT
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Home		Shift + Menu /
	Back		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Info		Info / Angle
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



