







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	Top Menu		Menu
	Disc Menu		D. Menu
	Smart TV		TV/R
	Bluetooth		Guide
	Home		Smart
	[≡]		Text
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung    Ersatzfernbedienung**

	Open/Close		Eject
	Return		Back
	III		Options
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	I<		I<<
	>I		>>I
	Vol+		Vol +
	Vol		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4





**Originalfernbedienung**    **Ersatzfernbedienung**

<b>5 JKL</b>	5	<b>5</b>	5
<b>MNO 6</b>	6	<b>6</b>	6
<b>7 PQRS</b>	7	<b>7</b>	7
<b>8 TUV</b>	8	<b>8</b>	8
<b>WXYZ 9</b>	9	<b>9</b>	9
<b>0_</b>	0	<b>0</b>	0
<b>SUBTITLE</b>	Subtitle	<b>AD SUBT</b>	Subt
<b>AUDIO</b>	Audio	<b>SOUND DUAL</b>	Dual

**Originalfernbedienung**    **Ersatzfernbedienung**