







 

 


 



 

 

 

 










Originalfernbedienung Ersatzfernbedienung

|   |               |   |                               |
|---|---------------|---|-------------------------------|
|    | Standby       |    | Power                         |
|    | Open/Close    |    | Eject / Surround              |
|    | Standby Tv    |    | Shift + Power                 |
|    | 1             |    | 1                             |
|    | 2             |    | 2                             |
|    | 3             |    | 3                             |
|    | 4             |    | 4                             |
|    | 5             |    | 5                             |
|    | 6             |    | 6                             |
|    | 7             |    | 7                             |
|   | 8             |   | 8                             |
|  | 9             |  | 9                             |
|  | Cancel        |  | Shift + Exit / Cancel / Clear |
|  | 0             |  | 0                             |
|  | Tv Input Sel. |  | AV / Input / RDS              |
|  | I<<           |  | I<< / Preset-                 |
|  | Slow          |  | Shift + Play / Slow           |

Slow

Originalfernbedienung Ersatzfernbedienung

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Pause    |    | Pause / Step / Freeze |
|    | >>       |    | >>  / Preset+         |
|    | <<       |    | << / Tune-            |
|    | Stop     |    | Stop / Hold           |
|    | Play     |    | Play / Slow           |
|    | >>       |    | >> / Tune+            |
|    | Tv Vol+  |    | Vol+                  |
|    | Tv Mute  |    | Mute / Dimmer         |
|    | Tv Prog+ |    | CH+ / Page+           |
|    | Tv Vol-  |    | Vol-                  |
|   | Tv Prog- |   | CH- / Page-           |
|  | Menu     |  | Menu / Home           |
|  | Return   |  | Back / Return         |
|  | Up       |  | Up                    |
|  | Left     |  | Left                  |
|  | OK       |  | OK                    |
|  | Right    |  | Right                 |



