 







 

 





 








 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Shift + Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	P-		CH- / Page-
	Menu		Menu / Home
	Quick		Shift + Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	[i+]		Info / Angle
	[>]		Shift + Right
	Guide		Guide / EPG / -/-
	*/O		Setup / OPT /
	*/Q		Shift + Setup / OPT / Tools
	Text		Text / Goto





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	O)I/II		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	[+ +]		Display / Media
<< button icon"/>	<<		<< / Tune-
	Pause		Pause / Step / Freeze
>> button icon"/>	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

