



















 
 
 




















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
























Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio		Shift + Back / Return
	Text		Text / Goto






Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	FAV		Fav / Marker / PC
	Info		Info / Angle
	Red/DVD/USB		Red / Netflix / Search
	Green/Title		Green / APP / Repeat
	Yellow/PBC		Yellow / YouTube / Repeat
	Blue/Angle		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Return		Back / Return
	Display		Display / Media
	DVD Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Reveal		Shift + Exit / Cancel / Clear
	Hold		Shift + Stop /
	List		Smart / List
	Index		TV/Radio /
	Subpage		Shift + Smart / List
	Size		Zoom / Size
	Mix		Shift + Display / Media
	Freeze		Shift + Pause / Step /

