





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Source		AV / Input / RDS
	OK		OK
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Prog+		CH+ / Page+
	Prog-		CH- / Page-
	Vol+		Vol+
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Menu		Menu / Home
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Cancel		Exit / Cancel / Clear
	TXT		Text / Goto
	Size		Zoom / Size



