
 





 












 

 

 

 

 

 

 

 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Pre Ch
	Source		AV
	OK		Ok
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Info		Info
	EPG		Guide
	Menu		Menu
	Red/A		Red
	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	Sleep		Sleep
	Cancel	 + 	Shift + Back
	TXT		Text
	Size		Dual



