

 



 













 





 











Originalfernbedienung Ersatzfernbedienung

|   |                |   |                       |
|---|----------------|---|-----------------------|
|    | Source         |    | AV / Input / RDS      |
|    | Power          |    | Power                 |
|    | Theatre        |    | Sleep / Timer         |
|    | <<             |    | << / Tune-            |
|    | Play           |    | Play / Slow           |
|    | >>             |    | >> / Tune+            |
|    | Sync Menu      |    | D.Menu / Top          |
|    | I-Manual       |    | I<< / Preset-         |
|    | Stop           |    | Stop / Hold           |
|    | >>             |    | >>  / Preset+         |
|  | I-Manual       |  | TV/Radio /            |
|  | Scene          |  | Picture / Format      |
|  | [+]            |  | Zoom / Size           |
|  | Digital/Analog |  | Smart / List          |
|  | Exit           |  | Exit / Cancel / Clear |
|  | Internet/Video |  | Display / Media       |
|  | FAV            |  | Fav / Marker / PC     |

Originalfernbedienung Ersatzfernbedienung

|   |         |   |                             |
|---|---------|---|-----------------------------|
|    | Guide   |    | Guide / EPG / -/--          |
|    | Up      |    | Up                          |
|    | [i+]    |    | Info / Angle                |
|    | Left    |    | Left                        |
|    | OK      |    | OK                          |
|    | Right   |    | Right                       |
|    | Return  |    | Back / Return               |
|    | Down    |    | Down                        |
|    | Options |    | Setup / OPT /               |
|    | Home    |    | Menu / Home                 |
|  | Red     |  | Red / Netflix / Search      |
|  | Green   |  | Green / APP / Repeat        |
|  | Yellow  |  | Yellow / YouTube / Repeat   |
|  | Blue    |  | Blue / Prime Video / Random |
|  | 1       |  | 1                           |
|  | 2       |  | 2                           |
|  | 3       |  | 3                           |



