 

 
 
 
 
 
 
 
 
 



 
 
 
 

 
 
 


 
 
 

 
 
 



 

 
 
 

 

 
 
 

 
 
 

 
 
 
 
 
 
 


 


 

 
 
 
 




**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |       |
|---|------------|---|-------|
|    | Power      |    | Power |
|    | Open/Close |    | Eject |
|    | 1          |    | 1     |
|    | 2          |    | 2     |
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|    | 6          |    | 6     |
|    | 7          |    | 7     |
|    | 8          |    | 8     |
|   | 9          |   | 9     |
|  | 0          |  | 0     |
|  | Clear      |  | Exit  |
|  | Repeat     |  | Text  |
|  | Play       |  | Play  |
|  | Stop       |  | Stop  |
|  | Pause      |  | Pause |

**Originalfernbedienung Ersatzfernbedienung**

|   |             |   |         |
|---|-------------|---|---------|
|    | >>          |    | >>      |
|    | <<          |    | <<      |
|    | >>          |    | >>      |
|    | <<          |    | <<      |
|    | Disc Menu   |    | D. Menu |
|    | Info/Menu   |    | Info    |
|    | Back        |    | Back    |
|    | Home        |    | Smart   |
|    | Title/Popup |    | Options |
|    | Enter       |    | Ok      |
|   | Up          |   | Up      |
|  | Down        |  | Down    |
|  | Right       |  | Right   |
|  | Left        |  | Left    |
|  | Red         |  | Red     |
|  | Green       |  | Green   |
|  | Yellow      |  | Yellow  |



