


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------------|
|  | Open/Close |  | Eject / Surround |
|  | Display |  | Display / Media |
|  | Standby |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Title/Return |  | Back / Return |
|  | 0 |  | 0 |
|  | Search |  | Red / Netflix / Search |
|  | Menu/Disc |  | Menu / Home |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------------------|
|  | Setup |  | Setup / OPT / |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | I<< |  | I<< / Preset- |
|  | Down |  | Down |
|  | >>I |  | >>I / Preset+ |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | Angle |  | Info / Angle |
|  | Zoom |  | Zoom / Size |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Mute |  | Mute / Dimmer |
|  | Repeat |  | Green / APP / Repeat |
|  | Repeat A-B |  | Yellow / YouTube / Repeat |



