




Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 * Setup / OPT /
	 CH.list Smart / List
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Down
	 Right
	 Left
	 OK

Originalfernbedienung	Ersatzfernbedienung
	 Back / Return
	 Audio / Lang I/II
	 Menu / Home
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Subtitle / EQ

