 

 

 

 
 
 



 

 
 
 
 
 


 






 
 
 


 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Input		AV
	Exit		Exit
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Hold/EPG		Options
	Index/CH.List		List

Originalfernbedienung Ersatzfernbedienung

	Size/Fav List		Format
	Subpage/Play List		Eject
	Red/Record		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Energy		Guide
	Picture		Shift + Format
	Sound		Dual
	Audio		3D
	[...]/Subtitle		Subt
	16:9/4:3		D. Menu
	Sleep		Sleep
	TTX		Text
	Recall/Repeat		Back
	1		1
	2		2



