





 
 

 














 

 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/TXT		Text
	Input		AV
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5

 


 

 

 
 











 
 
 

 

 


 


Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	FAV		Shift + Pre Ch
	Menu		Menu
	Exit		Exit
	Nicam/A2		Shift + Guide
	Display		Shift + Info
	Mute		Mute
	Picture		Format
	Sound		Dual
	Sleep		Sleep
	Subtitle		Subt
	EPG		Guide





Originalfernbedienung Ersatzfernbedienung

	CH/List		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Screen		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	Record		Rec
	>>/Size		>>
	<</Hold		<<
	Cancel		Shift + Back
	Reveal/Rep		Eject
	I<</Subpage		D. Menu
	>>/Index		Info
	List		List

Originalfernbedienung Ersatzfernbedienung

