



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Subtitle		Subtitle / EQ
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Audio		Audio / Lang I/II
	7		7
	8		8
	9		9
	Osd		Display / Media
	Time		Sleep / Timer
	10+		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	0		0
	PS/IS		Smart / List
	Title		Sound / Title
	Prog		TV/Radio /
	Clear		Exit / Cancel / Clear
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	Pbc		Picture / Format
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	>>		>> / Tune+
	Stop		Stop / Hold
	I<<		I<< / Preset-
	Zoom		Zoom / Size
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Vol+		Vol+
	Mute		Mute / Dimmer
	3D		Shift + 3
	Ran		D.Menu / Top
	Vol-		Vol-
	N/P		Red / Netflix / Search
	R/L		Blue / Prime Video / Random
	A/B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

