



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Hold		Stop / Hold
	♪		Sound / Title
	Sub		Subtitle / EQ
	16:9		Picture / Format
	TV/TX		TV/Radio /
	Double		D.Menu / Top
	[]		Setup / OPT /
	Mix		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Swap		Back / Return
	Vol+		Vol+
	PP		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0





Originalfernbedienung	Ersatzfernbedienung
	

The image shows a black universal remote control. At the top, there is a red power button, a 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these is a grid of buttons for different devices: TV, DVD, SAT, and AUX. Each device button has a corresponding function below it, such as 'SLOW', 'STEP-FREEZE', 'HOLD', and 'REC MODE' for TV. The next row contains playback controls: play, pause, stop, and a red record button. This is followed by a row of navigation buttons: left, right, previous, and next. Below these are buttons for 'TITLE', 'LANG/VI', 'EQ', and 'SURROUND'. The next row includes 'SOUND', 'AUDIO', 'SUBTITLE', and a list icon. This is followed by 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. The next row has 'PICTURE', 'ZOOM', 'SLEEP', and 'TV/RADIO'. Below these are 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The final row in this section contains 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below this is a row with 'HOME' and 'ANGLE' buttons. The center of the remote features a large navigation pad with four blue directional buttons (up, down, left, right) and a central 'OK' button. To the left of the pad are 'MENU' and 'CLEAR' buttons, and to the right are 'INFO' and 'RETURN' buttons. Below the pad are 'EXIT' and 'BACK' buttons. The next row contains 'CANCEL', 'LIST', and 'SMART' buttons. Below these are 'VOL' (with a plus/minus icon), 'MEDIA', and 'CH PAGE' (with a plus/minus icon). The next row has 'TV', 'DVD', and 'CD-STB' buttons. Below these are 'VIDEO', 'TAPE', and 'TUNER' buttons. The next row contains 'AUX-HDD', 'USB', and 'BLUETOOTH' buttons. Below these are '7', '8', and '9' buttons. The next row has 'GUIDE EPG', 'HDMI-SAT', and 'PC' buttons. Below these are '0', 'FAV MARKER', and 'NETFLIX' buttons. The bottom row contains 'APP', 'YouTube', and 'Prime Video' buttons. At the very bottom, there is a row of buttons: 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The 'Mandis shop' logo is prominently displayed in the center of the bottom half of the remote, and the website 'www.mandis.tv' is printed at the bottom.