
 
 

 
 


 
 
 
 

 

 

 

 
 
 




 



 
 

 

 
 
 
 
 
 


 
 
 
 
 




**Originalfernbedienung Ersatzfernbedienung**

|   |         |   |              |
|---|---------|---|--------------|
|    | Power   |    | Power        |
|    | OK      |    | Ok           |
|    | Up      |    | Up           |
|    | Down    |    | Down         |
|    | Right   |    | Right        |
|    | Left    |    | Left         |
|    | Mute    |    | Mute         |
|    | Sleep   |    | Sleep        |
|    | Tv/AV   |    | AV           |
|    | Display |    | Shift + Info |
|  | Tv-Exit |  | Exit         |
|  | Tv-Menu |  | Menu         |
|  | Vol+    |  | Vol +        |
|  | Vol-    |  | Vol -        |
|  | CH+     |  | Ch +         |
|  | CH-     |  | Ch -         |
|  | 1       |  | 1            |

**Originalfernbedienung Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | 2         |    | 2             |
|    | 3         |    | 3             |
|    | 4         |    | 4             |
|    | 5         |    | 5             |
|    | 6         |    | 6             |
|    | 7         |    | 7             |
|    | 8         |    | 8             |
|    | 9         |    | 9             |
|    | 0         |    | 0             |
|    | Recall    |    | Shift + Guide |
|  | Language  |  | Dual          |
|  | Zoom      |  | Shift + Eject |
|  | DVD-Setup |  | Media         |
|  | Menu      |  | D. Menu       |
|  | Subtitle  |  | Subt          |
|  | Program   |  | Shift + Sleep |

 
 


 
 

 

 
 
 

 

 
 
 

 




**Originalfernbedienung    Ersatzfernbedienung**

|   |                  |   |              |
|---|------------------|---|--------------|
|    | Angle            |    | Shift + TV/R |
|    | Title            |    | Back         |
|    | Goto             |    | Shift + Back |
|    | Slow             |    | Shift + AV   |
|    | Repeat           |    | Shift + Text |
|    | A-B              |    | Shift + Play |
|    | Picture          |    | Format       |
|    | Sound            |    | Shift + Dual |
|    | Nicam/A2         |    | Options      |
|    | Open/Close       |    | Eject        |
|   | Exit             |   | List         |
|  | Prog-            |  | Shift + Ch - |
|  | Play             |  | Play         |
|  | Prog+            |  | Shift + Ch + |
|  | Pause            |  | Pause        |
|  | Stop             |  | Stop         |
|  | TV/TXT/Tv Format |  | Text         |

**Originalfernbedienung    Ersatzfernbedienung**

|   |               |   |                |
|---|---------------|---|----------------|
|    | Cancel/Text   |    | Rec            |
|    | Reveal/Info   |    | Info           |
|    | Hold/Language |    | 3D             |
|    | Size/FAV      |    | Shift + Pre Ch |
|    | Subpage/EPG   |    | Guide          |
|    | Index         |    | Smart          |
|    | Red           |    | Red            |
|    | <<            |    | <<             |
|    | Tv/Radio      |    | TV/R           |
|    | Green/Audio   |    | Green          |
|   | >>            |   | >>             |
|  | Yellow/Freeze |  | Yellow         |
|  | I<<           |  | I<<            |
|  | >>I           |  | >>I            |
|  | Blue/Subtitle |  | Blue           |
|  | DVB Menu      |  | Shift + Media  |

