

 
 
 
 
 
 
 
 
 
 
 


 





 




 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------|
|  | POWER |  | Power |
|  | INFO |  | Info |
|  | HDMI CONTROL |  | Media |
|  | SLEEP |  | Sleep |
|  | SCREEN |  | Format |
|  | SOURCE |  | AV |
|  | PRESETS |  | Options |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------|
|  | RETURN |  | Back |
|  | MENU |  | Menu |
|  | ZOOM/RED/▲ |  | Red |
|  | REPEAT/GREEN/▼ |  | Green |
|  | ROOT/YELLOW |  | Shift + Yellow |
|  | TITLE/BLUE |  | Blue |
|  | OK/SELECT |  | Ok |
|  | UP |  | Up |
|  | DOWN |  | Down |
|  | RIGHT |  | Right |
|  | LEFT |  | Left |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | V+ |  | Vol + |
|  | V- |  | Vol - |
|  | FAV |  | Pre Ch |
|  | LANG |  | Dual |



