 





 

 

 

 

 

 

 

 



 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	Source		Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	FAV		Fav / Marker / PC
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

 
 

 
 

 



 
 
 



 



Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		I<< / Preset-
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	Red(O) Lang		Red / Netflix / Search
	Green/Subtitles		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

 

 
 
 
 


 
 


 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	List		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		I<< / Preset-
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	Red(O) Lang		Red / Netflix / Search
	Green/Subtitles		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Text		Text / Goto





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

