

 


















 
 


 



 







**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I-II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / -/--
	P<P		Fav / Marker / PC
	Menu		Menu / Home

















**Originalfernbedienung    Ersatzfernbedienung**

	Info		Info / Angle
	Left		Left
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Down		Down
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	Yellow/Feature		Yellow / YouTube / Repeat
	Blue/Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

	[≡]	 <b>GOTO TEXT</b>	Text / Goto
	[ /≡]	 <b>SHIFT + GOTO TEXT</b>	Shift + Text /
	[≡o]	 <b>TIMER SLEEP</b>	Sleep / Timer
	[≡+]	 <b>HOLD</b>	Stop / Hold
	[≡x]	 <b>OPT-TOOLS SETUP</b>	Setup / OPT /
	[≡◆]	 <b>SIZE ZOOM</b>	Zoom / Size
	[≡?]	 <b>LIST SMART</b>	Smart / List
	[≡i]	 <b>MEDIA DISPLAY</b>	Display / Media

Originalfernbedienung Ersatzfernbedienung