



Originalfernbedienung Ersatzfernbedienung

	Source	 + 	Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	TV	 + 	Shift + 1
	DVD	 + 	Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--	 + 	Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC



 








 

 









 



Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Mute		Mute / Dimmer
	Red/O Lang		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung







 



 

 

 

 

 


 

 

 


 
 



 Lang	Red/O) Lang	 LANG I/II	Audio / Lang I/II
 Subtitles	Green/Subtitles	 EQ	Subtitle / EQ
 Subtitles	Green/Subtitles	 APP REPEAT	Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
	Violet/Text	 GOTO TEXT	Text / Goto
	Stop Text		Shift + Stop /
	??? Text	 TIMER SLEEP	Sleep / Timer
	Zoom Text	 SIZE ZOOM	Zoom / Size
	Media/Digital	 MEDIA DISPLAY	Display / Media
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	T-Link	 TOP MENU D.MENU	D.Menu / Top
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung


 





 

 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ





	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
--	-----------------------	---------------------	--	-----------------------	---------------------

	Green/Subtitles	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Violet/Text	Text / Goto			
	<<	<< / Tune-			
	Play	Play / Slow			
	>>	>> / Tune+			
	Rec	Rec / Rec Mode			
	Stop	Stop / Hold			
	Pause	Pause / Step / Freeze			




**Originalfernbedienung   Ersatzfernbedienung**

	Source / Eject		Eject / Surround
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0 / --		Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

 

 
 




















 



 



 


**Originalfernbedienung   Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-
	Mute		Mute / Dimmer
	Red / A-B		Shift + Yellow / YouTube /
	Red / A-B		Red / Netflix / Search





**Originalfernbedienung   Ersatzfernbedienung**

 Subtitles	Green / Subtitles	 APP  REPEAT	Green / APP / Repeat
 Subtitles	Green / Subtitles	 EQ  SUBTITLE	Subtitle / EQ
 Subtitles	Yellow / Size	 YouTube  REPEAT A-B	Yellow / YouTube / Repeat
 Subtitles	Yellow / Size	 SIZE  ZOOM	Zoom / Size
 Subtitles	Blue / Lang	 Prime Video  RANDOM	Blue / Prime Video / Random
 Subtitles	Blue / Lang	 LANG I/II  AUDIO	Audio / Lang I/II
 Subtitles	Purple / Text	 GOTO  TEXT	Text / Goto
 STOP	Text Stop	 SHIFT +  HOLD	Shift + Stop /
 Text ???	Text ???	 TIMER  SLEEP	Sleep / Timer
 ZOOM	Text Zoom	 SHIFT +  SIZE  ZOOM	Shift + Zoom /
 TUNE-	<<	 TUNE-	<< / Tune-
 Play	Play	 SLOW	Play / Slow
 TUNE+	>>	 TUNE+	>> / Tune+
 Stop	Stop	 HOLD	Stop / Hold
 Pause	Pause	 STEP - FREEZE  II	Pause / Step / Freeze

**Originalfernbedienung   Ersatzfernbedienung**