



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------------|
|  | Power |  | Power |
|  | Rec |  | Rec / Rec Mode |
|  | Red |  | Red / Netflix / Search |
|  | I<< |  | I<< / Preset- |
|  | Green/[] |  | Green / APP / Repeat |
|  | Stop |  | Stop / Hold |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Play/[] |  | Play / Slow |
|  | Blue/[] |  | Blue / Prime Video / Random |
|  | >>I |  | >>I / Preset+ |
|  | AV/[] |  | AV / Input / RDS |
|  | I-II/[] |  | Audio / Lang I/II |
|  | [<>]/[+] |  | Picture / Format |
|  | [-S-] |  | Zoom / Size |
|  | Menu |  | Menu / Home |
|  | [≡] |  | Text / Goto |
|  | Pause |  | Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Down |  | Down |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Smart |  | Sound / Title |
|  | P- |  | CH- / Page- |
|  | Smart [] |  | Smart / List |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------|--|-------------------|
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | [i+] | | Info / Angle |
| | 0 | | 0 |
| | P<P | | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung


 
 
 


 
 
 
 


 
| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




Originalfernbedienung Ersatzfernbedienung

 

 

 

 

 

 

 



| | | |
|---|---|---------------------------|
|  |  | Eject / Surround |
|  |  | Subtitle / EQ |
|  |  | Power |
|  |  | Rec / Rec Mode |
|  |  | I<< / Preset- |
|  |  | Red / Netflix / Search |
|  |  | Green / APP / Repeat |
|  |  | Stop / Hold |
|  |  | Play / Slow |
|  |  | Yellow / YouTube / Repeat |
|  |  | >>I / Preset+ |
|  |  | AV / Input / RDS |
|  |  | Audio / Lang I/II |
|  |  | Zoom / Size |
|  |  | Picture / Format |
|  |  | Menu / Home |
|  |  | Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | [≡] |  | Text / Goto |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Down |  | Down |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Smart J |  | Sound / Title |
|  | P- |  | CH- / Page- |
|  | Smart [] |  | Smart / List |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |




Originalfernbedienung Ersatzfernbedienung




 


 

 
 

 

 



 



 




| | | | |
|---|------|---|-------------------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | [i+] |  | Info / Angle |
|  | 0 |  | 0 |
|  | P<P |  | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung



 




| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Power |  | Power |
|  | -0- |  | Subtitle / EQ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | AV/[?] |  | AV / Input / RDS |
|  | I-II/[≡ ≡] |  | Audio / Lang I/II |
|  | [<>]/[+] |  | Zoom / Size |
|  | Pause |  | Pause / Step / Freeze |
|  | [≡] |  | Text / Goto |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Down |  | Down |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------------------|
|  | Vol- |  | Vol- |
|  | Smart J |  | Sound / Title |
|  | P- |  | CH- / Page- |
|  | Smart [] |  | Smart / List |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P<P |  | Fav / Marker / PC |

