

 
 


 



 

 

 


 
 



 

 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Shift + Info
	Repeat		Text
	Dimmer		Media
	Random		Smart
	Program		Sleep
	Play/Pause iPod		Red
	Play/Pause CD		Green
	Play/Pause USB		Yellow
	Tuner/Audio In		Blue
	Stop		Stop
	<<		<<
	>>		>>
	Tuner Mode		TV/R
	Menu/Cancel		Menu
	Resume		Info
	Fade Muting		Mute

Originalfernbedienung Ersatzfernbedienung

	Clock/Timer		Shift + AV
	Sleep/Auto Stby		Guide
	PTY		AV
	Sound Turbo		Dual
	HBS		Ch +
	Bass/Treble		Ch -
	Vol+		Vol +
	Vol-		Vol -
	SET		Ok
	Up		Up
	Down		Down
	>>		>>
	>>		Right
	<<		<<
	<<		Left

