



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/--
	PRE-CH		0
	Tv/DTV		Fav / Marker / PC
	CH.List		TV/Radio /
	D.Menu		Smart / List
			D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Vol+		Vol+
	P+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-
	P-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter/OK		OK
	Right		Right





Originalfernbedienung

Ersatzfernbedienung

	Down		Down
	Return		Back / Return
	Info		Info / Angle
	Anynet		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text/Mix		Text / Goto
	[≡ ◆]/P.Size		Zoom / Size
	[≡ o]/P.Mode		Picture / Format
	[≡ +]/PIP		Setup / OPT /
	Guide		Guide / EPG / --
	I-II/Dual		Audio / Lang I/II
	Still		Eject / Surround
	Subtitle		Subtitle / EQ

Originalfernbedienung

Ersatzfernbedienung

