

 



 

 

 


 













 

 

 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	DVD Setup		Media
	Title		List
	Menu (Blue)		D. Menu
	USB/CR		3D
	Nicam/A2		Shift + Options
	Sleep		Sleep
	Aspect		Format
	Eject		Eject
	Display		Shift + Info
	Auto		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	DTV		Smart
	Source		AV
	Menu		Menu

 











 

 


 

 

 
 
 
 
 


 
 


**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide





**Originalfernbedienung    Ersatzfernbedienung**

	EPG		Guide
	Recall		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Info		Info
	FAV		Shift + Pre Ch
	Tv/Radio		TV/R
	Audio		Dual
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec/Hold		Rec
	<</Index		<<
	>>/Size		>>

**Originalfernbedienung    Ersatzfernbedienung**

	I<</Reveal		I<<
	>>I/Sbpage		>>I
	Subtitle (Green)		Subt
	Zoom		Shift + Eject
	Goto		Options
	Subtitle (Blue)		Shift + Subt
	Angle		Shift + TV/R
	Red/Program		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

