 




 
 

 

 
 
 
 
 
 

 
 

 
 

 


 
 

 
 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Audio I/II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





 
 



 


 
 

 

 

 

 
 
 
 


 


 



**Originalfernbedienung    Ersatzfernbedienung**

	-/--		Shift + Guide
	Recall		Pre Ch
	Menu		Menu
	Exit		Exit
	Text		Text
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Size		Format
	Reveal		Back
	Mix		Smart
	Index		List
	EPG		Guide
	Media		Media
	Timeshift		Options
	Tv/Radio		TV/R
	Play		Play
	Pause/hold		Pause
	Rec		Rec
	Stop/FAV		Stop
	I<</Cancel		I<<
	>>I/Subpage		>>I

Originalfernbedienung Ersatzfernbedienung

	<</FAV-		<<
	>>/FAV+		>>

