









 

 
 
 
 
 



 
 




 

 





 





 

 

 



 











 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | Timer/□□ |  | Sleep / Timer |
|  | []/T-C |  | Picture / Format |
|  | Audio/Repeat |  | Shift + Green / APP / |
|  | Audio/Repeat |  | Audio / Lang I/II |
|  | [+]/Eye/SV |  | Display / Media |
|  | →[]←/Disc Menu/SP/LP |  | D.Menu / Top |
|  | Radio/Search/000 |  | Shift + Red / Netflix / |
|  | Radio/Search/000 |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |










 






 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | */EPG |  | Guide / EPG / -/-- |
|  | 0/AV |  | AV / Input / RDS |
|  | 0/AV |  | 0 |
|  | #/PIP |  | Smart / List |
|  | Menu |  | Menu / Home |
|  | End |  | Exit / Cancel / Clear |
|  | Text |  | Text / Goto |
|  | Info |  | Info / Angle |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | Timer/□□ |  | Sleep / Timer |
|  | []/T-C |  | Picture / Format |
|  | [+]/Eye/SV |  | Display / Media |
|  | →[]-/Disc Menu/SP/LP |  | D.Menu / Top |
|  | Radio/Search/000 |  | Shift + Red / Netflix / |
|  | Radio/Search/000 |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |















 



 

 

 



 





 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | 0/AV |  | AV / Input / RDS |
|  | 0/AV |  | 0 |
|  | Menu |  | Menu / Home |
|  | End |  | Exit / Cancel / Clear |
|  | Text |  | Text / Goto |
|  | Info |  | Info / Angle |
|  | P+ |  | CH+ / Page+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | P- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |







 

 

 

 

 

 

 

 

















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | Timer/□□ |  | Sleep / Timer |
|  | []/T-C |  | Picture / Format |
|  | Audio/Repeat |  | Green / APP / Repeat |
|  | Audio/Repeat |  | Audio / Lang I/II |
|  | [+]/Eye/SV |  | Display / Media |
|  | →[]←/Disc Menu/SP/LP |  | D.Menu / Top |
|  | Radio/Search/000 |  | Red / Netflix / Search |
|  | Radio/Search/000 |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/AV |  | 0 |
|  | 0/AV |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | End |  | Exit / Cancel / Clear |
|  | Info |  | Info / Angle |
|  | P+ |  | CH+ / Page+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | P- |  | CH- / Page- |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |



