 



 

 

 




 












 









 

 



 






 



 

 







Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	3D		Shift + 3
	TV		Shift + 1
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Eco		Display / Media
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+

 


 

 

 















 







Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Info		Info / Angle
	Option		Setup / OPT /
	Smart Tv		Smart / List
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Zoom-		Shift + Down

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Zoom+		Shift + Up
	@/Home		D.Menu / Top
	Sleep		Sleep / Timer
	Pre-CH		Shift + Back / Return
	FAV		Fav / Marker / PC
	List		Shift + Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	OO/Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	I<		I<< / Preset-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	>		>>  / Preset+
	<<		<< / Tune-
	Rec		Rec / Rec Mode
	>>		>> / Tune+

