 



 

 

 
 
 
 
 

 

 

 
 
 

 
 
 
 
 
 


 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Yellow		Yellow
	Blue		Blue
	Green		Green
	EPG		Guide
	Subtitle		Subt
	TTX		Text
	Audio		Dual
	i		Info
	FAV		Pre Ch
	Tv/Radio		TV/R





**Originalfernbedienung   Ersatzfernbedienung**

VIDEO	Video	HOME SMART	Smart
SCAN	Scan	APP MEDIA	Media
DEVICE	Device	SETTINGS OPT	Options
FILE	File	DISC NAV LIST	List
ZOOM	Zoom	ZOOM	Eject
ROLL	Roll	TIMER AV	AV
RECORD	Record	REC MODE	Rec
PREV	Prev.	⏮	I<<
NEXT	Next	⏭	>>I
▶/	Play	▶	Play
▶/	Pause		Pause
⏪	<<	⏪	<<
⏩	>>	⏩	>>

**Originalfernbedienung   Ersatzfernbedienung**