


 



 
 


 

 

 



 



 

 













 














 


 

 

 

 



 


 

 



 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 4	 4
 Source	 AV	 5	 5
 Rec	 Rec	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 Lang	 Dual	 0	 0
 <<	 <<	 Tv	 TV/R
 >>	 >>	 Back	 Shift + Back
 Text	 Text	 Up	 Up
 Red	 Red	 Down	 Down
 Green	 Green	 Right	 Right
 Yellow	 Yellow	 Left	 Left
 Blue	 Blue	 OK	 Ok
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 BACK	 Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Q.Menu	 D. Menu		
 O	 Options		
 Music/Photo	 Eject		
 */o	 Subt		
 */Search	 Sleep		
 Tv List	 List		
 i	 Info		
 [≡]	 Guide		
 Size	 Format		
 Vol+	 Vol +		
 Vol-	 Vol -		
 PR+	 Ch +		
 PR-	 Ch -		
 Mute	 Mute		

