












 





 

 

 









 

 

 

 





 

 

 



 






 
 

 



 
 
 


 



 


 


 

 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang		Dual
	<<		<<
	>>		>>
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Back		Shift + Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	BACK		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Q.Menu	 D. Menu		
 O	 Options		
 Music/Photo	 Eject		
 */o	 Subt		
 */Search	 Sleep		
 Tv List	 List		
 i	 Info		
 [≡]	 Guide		
 Size	 Format		
 Vol+	 Vol +		
 Vol-	 Vol -		
 PR+	 Ch +		
 PR-	 Ch -		
 Mute	 Mute		

