


 



 
 


 

 

 



 



 

 













 














 


 

 

 

 



 


 

 



 

 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		4		4
	Source		AV		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang		Dual		0		0
	<<		<<		Tv		TV/R
	>>		>>		Back		Shift + Back
	Text		Text		Up		Up
	Red		Red		Down		Down
	Green		Green		Right		Right
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		BACK		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Q.Menu		D. Menu
	O		Options
	Music/Photo		Eject
	*/o		Subt
	*/Search		Sleep
	Tv List		List
	i		Info
	[≡]		Guide
	Size		Format
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute

