 



 
 


 
 
 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Rec		Rec
	Tv/TXT		Text
	Cancel		Shift + Exit
	Hold		Options
	Reveal		D. Menu
	Size		3D
	Red		Red
	Green		Green
	Subpage		Eject

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow
	Index		List
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Input		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	DVB		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok



