




 
 
 

 
 
 
 


 
 
 

 
 
 

 

 
 

 
 
 
 
 

 

 


 
 

 



 





 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		3D
	Guide		Guide
	Menu		Menu
	Exit		Exit
	Option		Options

**Originalfernbedienung    Ersatzfernbedienung**

	Return		Back
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Subtitle		Subt
	List		List
	Tv		TV/R
	Red		Red



