

 

 



 



 

 



 





 





 



 


 
 









 



 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

|   |             |   |                          |
|---|-------------|---|--------------------------|
|    | Power       |    | Power                    |
|    | Off Timer   |    | Sleep / Timer            |
|    | Input Tv    |   | Shift + AV / Input / RDS |
|    | Input AV    |    | AV / Input / RDS         |
|    | Menu        |    | Menu / Home              |
|    | [+]/Aspect  |    | Picture / Format         |
|    | N           |    | D.Menu / Top             |
|    | OO/Surround |    | Eject / Surround         |
|    | i           |    | Info / Angle             |
|    | X/Exit      |    | Exit / Cancel / Clear    |
|   | Viera Tools |   | Display / Media          |
|  | Internet    |  | Smart / List             |
|  | Up          |  | Up                       |
|  | Guide       |  | Guide / EPG / -/--       |
|  | Left        |  | Left                     |
|  | OK          |  | OK                       |
|  | Right       |  | Right                    |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                             |
|---|-------------|---|-----------------------------|
|    | Option      |    | Setup / OPT /               |
|    | Down        |    | Down                        |
|    | Return/Back |    | Back / Return               |
|    | Red         |    | Red / Netflix / Search      |
|    | Green       |    | Green / APP / Repeat        |
|    | Yellow      |    | Yellow / YouTube / Repeat   |
|    | Blue        |    | Blue / Prime Video / Random |
|    | [≡]/Text    |    | Text / Goto                 |
|    | [≡◆]/STTL   |    | Subtitle / EQ               |
|    | [≡i]/Index  |    | Sound / Title               |
|   | [≡+]/Hold   |   | Shift + Stop /              |
|  | 1           |  | 1                           |
|  | 2           |  | 2                           |
|  | 3           |  | 3                           |
|  | 4           |  | 4                           |
|  | 5           |  | 5                           |
|  | 6           |  | 6                           |





**Originalfernbedienung Ersatzfernbedienung**

|  |             |  |                   |
|--|-------------|--|-------------------|
|  | 7           |  | 7                 |
|  | 8           |  | 8                 |
|  | 9           |  | 9                 |
|  | Mute        |  | Mute / Dimmer     |
|  | 0           |  | 0                 |
|  | Last View   |  | Fav / Marker / PC |
|  | Vol+        |  | Vol+              |
|  | PR+         |  | CH+ / Page+       |
|  | Vol-        |  | Vol-              |
|  | PR-         |  | CH- / Page-       |
|  | Power Down  |  | Shift + Power     |
|  | Programme ▼ |  | Shift + CH- /     |
|  | Programme ▲ |  | Shift + CH+ /     |
|  | <</l<<      |  | << / Tune-        |
|  | Play        |  | Play / Slow       |
|  | >>/>>l      |  | >> / Tune+        |
|  | Stop        |  | Stop / Hold       |

**Originalfernbedienung Ersatzfernbedienung**

|  |            |  |                       |
|--|------------|--|-----------------------|
|  | Pause/Step |  | Pause / Step / Freeze |
|  | Rec        |  | Rec / Rec Mode        |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |
|  |            |  |                       |

